
GEN II QUICK START INSTALLATION GUIDE





Condensed General Installation Guide


NOTE: Although this guide focuses on the Gen II overglazed systems, the material is applicable to all Gen II Storefront Security Products.

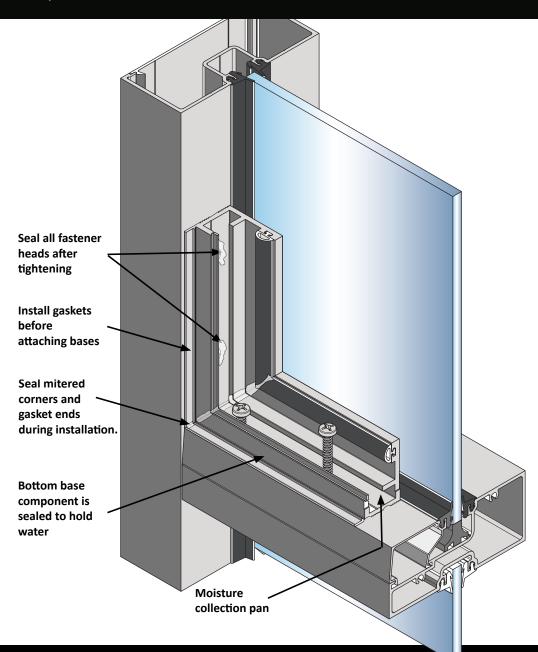

GEN II QUICK START INSTALLATION GUIDE



System Selection

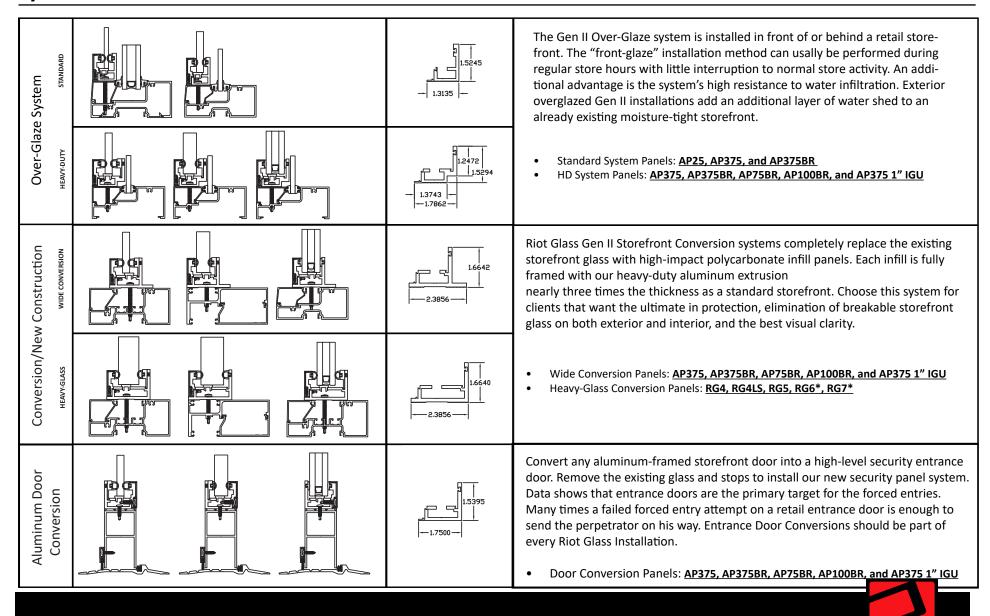


GEN II QUICK START INSTALLATION GUIDE





The Riot Glass Gen II AP Series Framing System is designed for easy installation. The diversity of the framing system makes Gen II adaptable to almost any commercial aluminum storefront and framed entrance door project with a minimal number of parts. Although previous glazing experience is preferred, it is not required in order to provide the customer with a top-rated security envelope with an eye-pleasing installation.


This guide is intended to assist the installer with general installation steps with detailed information available in our Installation and Trainig Guide. We highly recommend installers carefully review both documents before beginning installation.


Tools Required

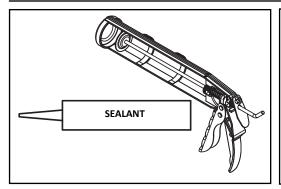

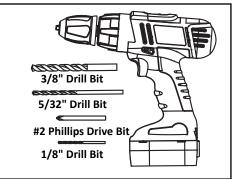


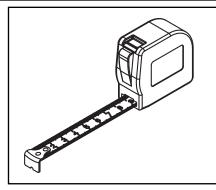


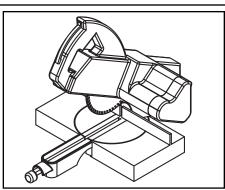

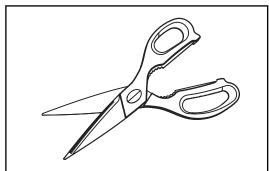



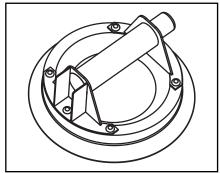

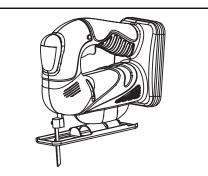


Jobsite Material Storage Precautions


All aluminum materials delivered to job site must be stored in a dry and safe place, well removed from possible damage and covered until use. All polycarbonate panels must be protected from water, chemicals, and direct sunlight until installed. Remove protective liners immediately after installation. Prolonged sunlight exposure will negatively affect the safety liner adhesive and become very difficult to remove. Although polycarbonate is extremely durable it can be scratched, even through the liner, when in contact with sharp objects. Minimize the material storage time on the jobsite with all Riot Glass Gen II products,




GENERAL INSTALLATION




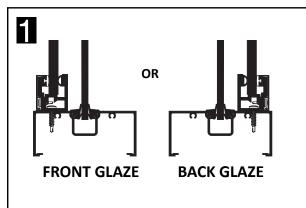


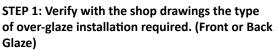


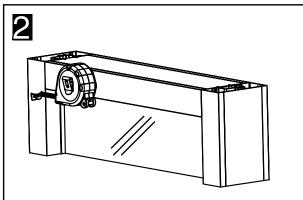


STEP 2: Measure the horizontal DLO (daylight opening) opening between the vertical storefront faces. Do not measure the gaskets.

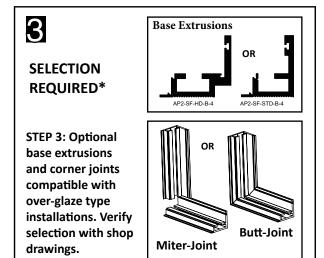

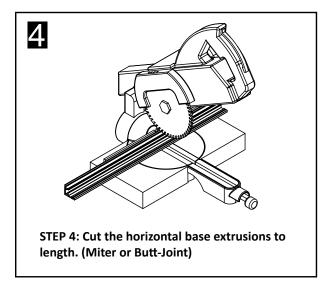

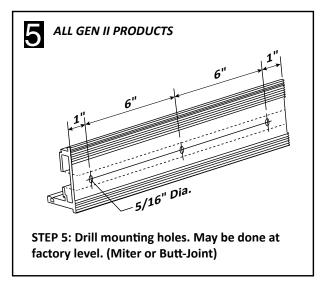

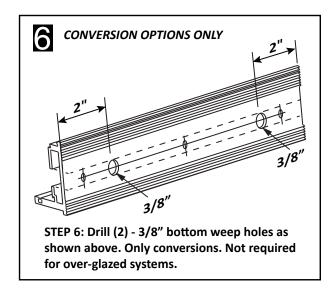



^{*}Overglaze but-joint corners shown for illustration purposes. Miter-joint corners require similar steps.





GENERAL INSTALLATION




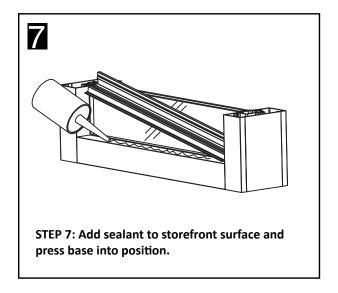


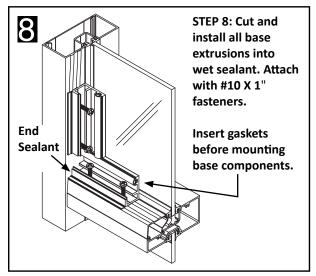

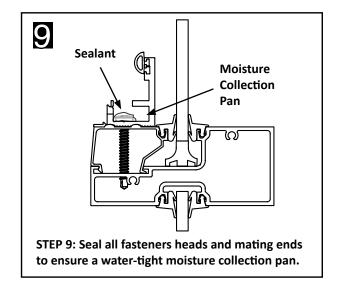

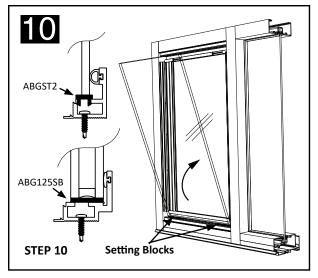

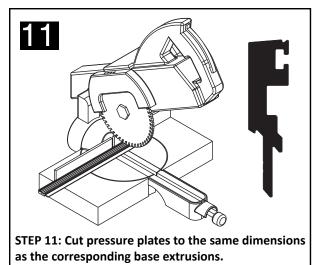


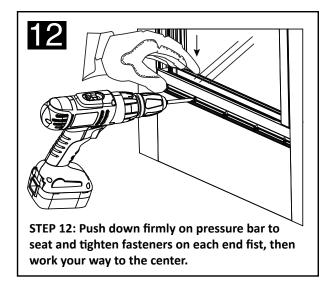






GENERAL INSTALLATION



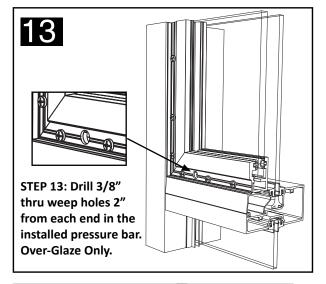

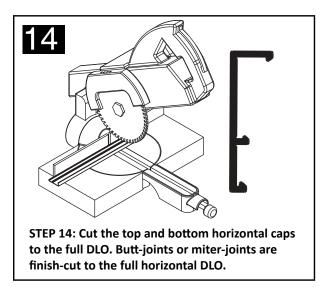

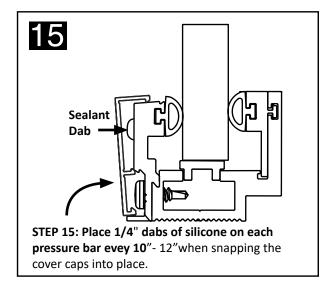

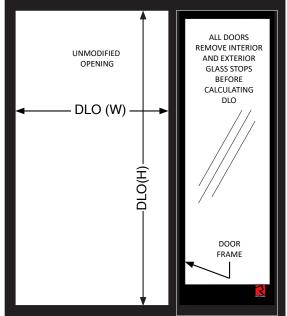

SECURITY PANEL CUT-SIZE TABLE		
SYSTEM TYPE	CUT PANEL HEIGHT	CUT PANEL WIDTH
STD OVERGLAZE -AP2-STD -SF	DLO(H) - (1-5/8")	DLO(W) - (1-1/2")
HD OVERGLAZE - AP2-HD-SF	DLO(H) - (1-5/8")	DLO(W) - (1-1/2")
HD CONVERSION - AP2-SF-HD	DLO(H) - (1-7/8")	DLO(W) - (1-3/4")
HG CONVERSION - AP2-SF-HG	DLO(H) - (1-7/8")	DLO(W) - (1-3/4")
DOOR CONVERSION - AP2-DC	DLO(H) - (1-5/8")	DLO(W) - (1-1/2")

